

## RECOMMENDATIONS FOR FURLING LINE FITTING

### 90° for the furling line :

Whatever furling model (LS, LX, RX or FD), the furling line must run with 90° angle from the forestay (see against).



### Furling line inside the guide :

LS-LX-RX models: the furling line must run through one S/S guide.



### Halyard tension :

- The halyard can be slackeden when sailing downwind or in light winds (and inversely) in order to improve boat performance
- After sailing, one should not forget to slacken the halyard, this will release tension in the sail, mast sheaves and above all the halyard swivel.
- don't forget to stretch the halyard before sailing.

