



Furling with the ratchet system :



Lay Furling OUT with the ratchet option on.

From a locked position, rotate the drum half a turn (furling in) to release the ratchet lock. Once released the sail will unfurl easily.

Furling IN with the ratchet option on. Start furling in. If you stop at any time and let go of the furling line, the flying sail will be automatically locked, thanks to the ratchet device. Once ready to resume, simply start furling again. The ratchet in the continuous line drum will be automatically activated from the first rotation.